 


 
 


 
 
 


 
 
 
 

 


 
 


 
 
 





G18405 Parts List

1  MAIN CABINET 1 PIECE	2  LEFT LEG 2 PIECES	3  RIGHT LEG 2 PIECES	4  LEG PANEL 2 PIECES	5  PUSHER 2 PIECES
6  PUCK 2 PIECES	7 PRE-INSTALLED  FELT PAD 2 PIECES	8  LEG LEVELER 4 PIECES	9  ALLEN WRENCH 1 PIECE	10  3 x 15 MM WASHER HEAD SCREW 12 PIECES
11  5/16" x 1-1/4" BOLT 12 PIECES	12  5/16" WASHER 12 PIECES	13 PRE-INSTALLED  BLOWER 1 PIECE	14 PRE-INSTALLED  SIDE APRON 2 PIECES	15 PRE-INSTALLED  END APRON-A 1 PIECE
16 PRE-INSTALLED  END APRON-B 1 PIECE	17 PRE-INSTALLED  CONTROL BOX 1 PIECE	18 PRE-INSTALLED  CATCHER COVER 2 PIECES	19 PRE-INSTALLED  APRON CORNER 4 PIECES	20 PRE-INSTALLED  SCORER DISPLAY 2 PIECES
21 PRE-INSTALLED  TIME DISPLAY 1 PIECE	22 PRE-INSTALLED  BATTERY BOX 1 PIECE	23 PRE-INSTALLED  SCORER DISPLAY WIRE 1 PIECE	24 PRE-INSTALLED  TIME DISPLAY WIRE 1 PIECE	25 PRE-INSTALLED  PUCK CATCHER with LONG WIRE 1 PIECE
26 PRE-INSTALLED  PUCK CATCHER with SHORT WIRE 1 PIECE	27 PRE-INSTALLED  GOAL BOX 2 PIECES	28 PRE-INSTALLED  TOP CORNER 4 PIECES	29 PRE-INSTALLED  SQUARE NUT AND SCREW 4 SETS	30 PRE-INSTALLED  T - NUT 12 PIECES

WARNING:
CHOKING HAZARD
Small parts.
Not for children under
3 yrs.

Assembly Tips:

Attention: If you are using an electric screwdriver in the assembly, please set at low torque and do not over tighten the hardware. When assembling individual parts, loosely tighten screws until all screws are inserted, then tighten completely

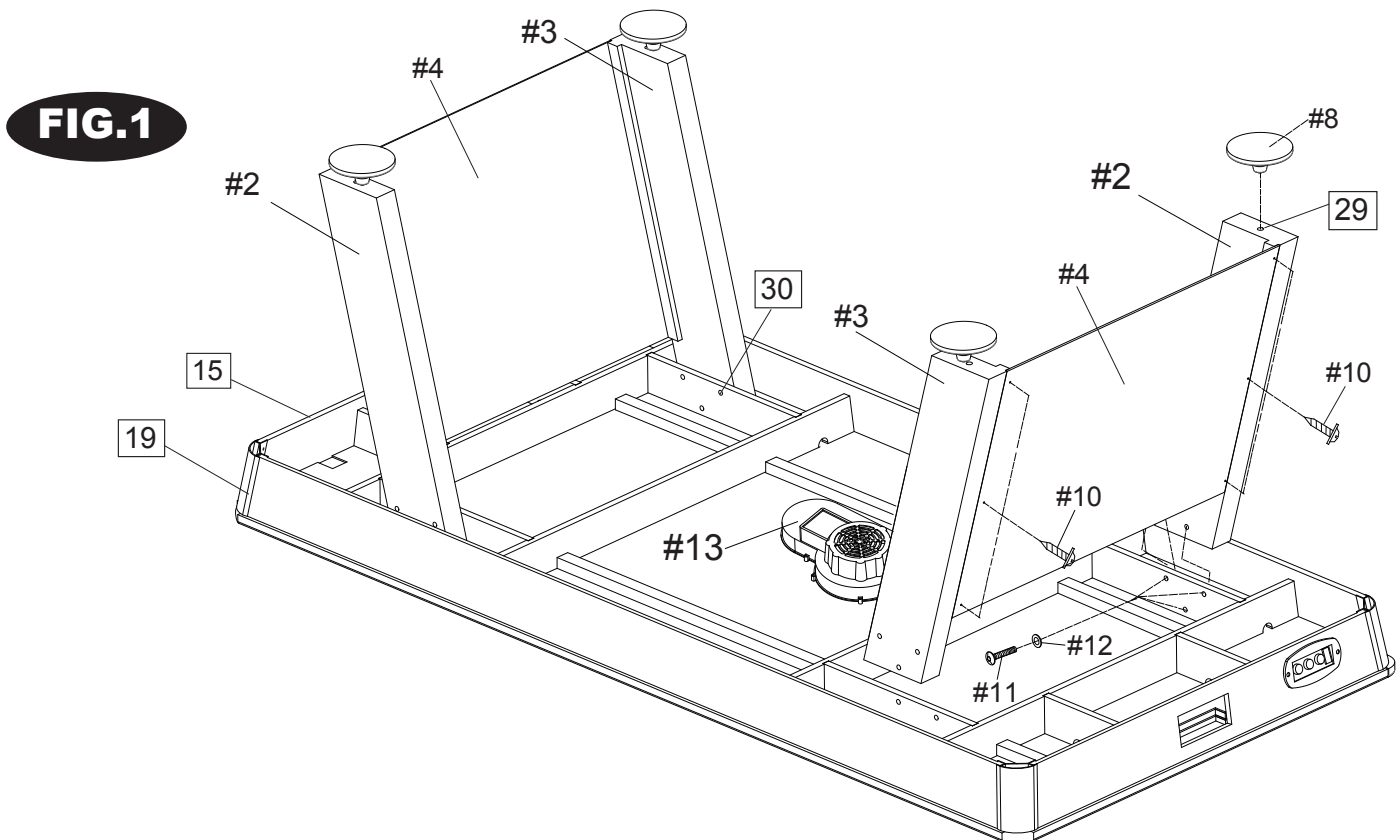
Assembly Instructions

1. Find a clean, level place to begin the assembly of your Air Hockey table. The table will be assembled upside down and then turned over on its legs once the assembly completed. This game table is heavy, and turning it over will require at least two strong adults.
2. Remove all the parts from the box and verify that you have all of the listed parts as shown on the parts identifier below. Carefully cut or tear the four corners of the box so that the bottom of the box can be used as your work surface.

PARTS REQUIRED:

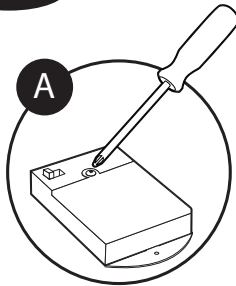
1 pc - #1 Main Cabinet	2 pcs - #4 Leg Panel	12 pcs - #10 Screw
2 pcs - #2 Left Leg	4 pcs - #8 Leg Leveler	12 pcs - #11 Bolt
2 pcs - #3 Right Leg	1 pc - #9 Allen Wrench	12 pcs - #12 Washer

3. Attach the Left Leg (#2) and Right Leg (#3) to the Main Cabinet (#1) using Allen Head Bolts (#11) and Flat Washers (#12) as shown in **FIGURE 1**. Use #9 Allen Wrench to tighten Bolts.
4. Attach the Leg Panel (#4) to the Leg using Screws (#10) as shown in **FIGURE 1**. **TIGHTEN, BUT DO NOT STRIP OUT #10 SCREWS.**
5. Screw Leg Levelers (#8) into Legs as shown in **FIGURE 1**.

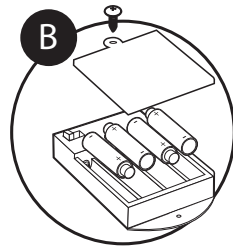


6. Unscrew screw using a screwdriver and open the battery box, Insert (4) AA batteries (not included) in the order of polarity as shown on the inside of battery box, Then close using a screwdriver. Turn on the power by turn the on/off switch of battery box. (If the game will not be used for a long period of the time, we recommend that the batteries be removed)

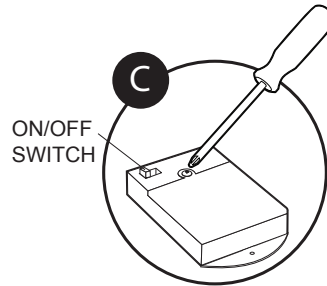
FIG.2



- Unscrew and remove cover.



- Insert 4 AA Batteries
(Batteries not included).



- Return cover and insert Screw.



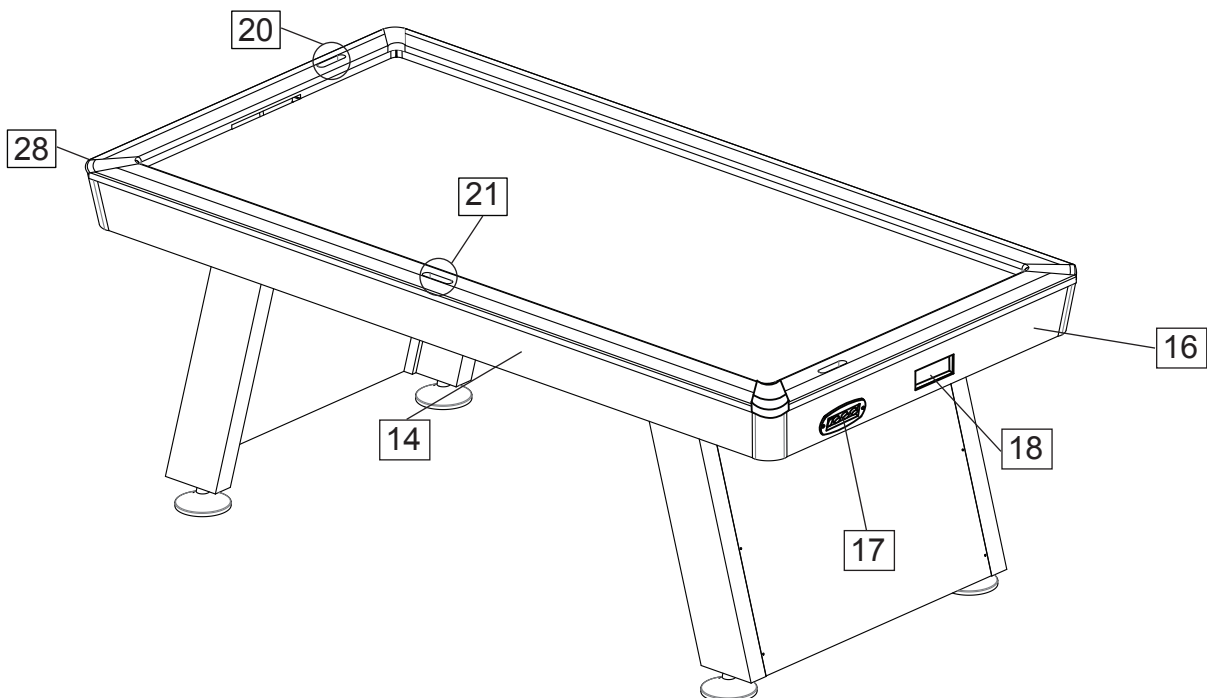
WARNING:

- 1) Do not mix old and new batteries.
- 2) Do not mix alkaline, standard (carbon zinc), or rechargeable (nickel-cadmium) batteries.
- 3) Do not dispose of batteries in fire, batteries may explode or leak.



WARNING:

THIS STEP REQUIRES TWO OR MORE ADULTS.
VERY CAREFULLY TURN THE TABLE OVER AND SET IT ON
ITS LEGS. BE CAREFUL, THE TABLE IS HEAVY.

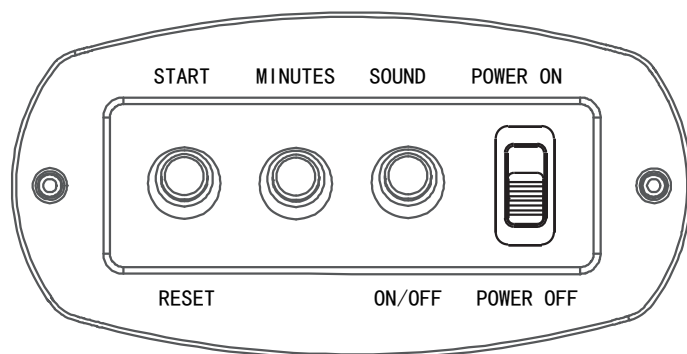


Congratulations! You have now assembled your Hockey Table. Please note the Care and Use instructions below to ensure many years of trouble free use of your Hockey Table.

CARE AND USE OF YOUR HOCKEY TABLE

1. Use only a suitable 120v AC household outlet, and insure the cord is not a trip hazard.
2. For long life and best play from your air hockey table, apply spray furniture polish to clean cloth and wipe down the playfield with air motor running to make the pucks slide faster before first play and frequently thereafter.
3. This product is intended for **INDOOR** use only.
4. **DO NOT** operate the motor if the cord is damaged in any way.
5. **DO NOT** sit, climb or lean on the table.
6. **DO NOT** drag the table when moving it. This will damage the legs.
7. **DO NOT** set drinks on the table.
8. It is suggested that this table be placed close to wall thus allowing the air motor cord to **NOT** be a trip hazard. Always turn air motor off when table is not in use.

SCOREBOARD OPERATION



POWER ON/OFF - Slide the POWER ON/OFF Switch to turn the scoreboard ON or OFF

SOUND ON/OFF - Press the SOUND button at any time to turn the sound ON or OFF.

MINUTES - Press the MINUTES button to scroll through the playing time options

START/RESET - Press the START button to select the current time and begin playing the game. After the game is over, press the RESET button to RESET the scoreboard. Press and hold the RESET button for 3 seconds to RESET the scorer at any time